

# Application Guide

## WAN/LAN VLAN Configuration



## Contents

<b>Contents .....</b>	<b>2</b>
<b>Revision History .....</b>	<b>2</b>
<b>1 Overview .....</b>	<b>3</b>
<b>2 Description .....</b>	<b>3</b>
2.1 Test Topology .....	3
2.2 Client Setup .....	3
2.3 Server Setup .....	4

## Revision History

Updates between document versions are cumulative. Therefore, the latest document version contains all updates made to previous versions.


Doc Version	Product	Release Data	Details
V1.0	Hongdian Router	2022.07.07	First Release

# 1 Overview

The routers with serial ports can be used as DTU mode (Data Terminal unit), and two routers can use as remote data transmission client and server to achieve the effect of remote transmission of serial data.

## 2 Description

### 2.1 Test Topology

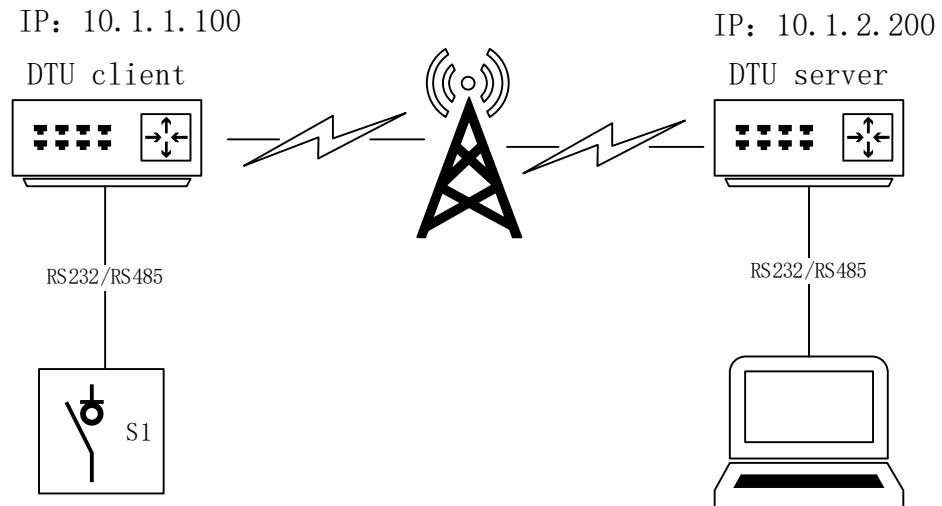

### 2.2 Client Setup

1. Connect the device and the router with the serial cable and log in to the router management page: 192.168.8.1
2. Click **Applications - DTU/MODBUS**, refer to the following diagram for configuration

**TIP:** Please make sure to connect the correct serial port, some devices support 2\*RS232, some devices support 1\*RS232 + 1\*RS485, if DDNS is used, ensure that the domain name address is correctly resolved.

**Work Mode:**  
When the work mode is set to "Server", you should set the local port number at the same time. In other modes, when the local port is empty, then router will get it randomly.

**Data Center:**  
When the work mode is set to "Server", you do not need to configure the server ip.

**Login packets Settings:**  
When login package configuration for hexadecimal, login content to begin with "0x" or "0X" to be marked, such as "0x123abc" or "0X123abc"

**Heartbeat Settings:**  
When heartbeat package configuration for hexadecimal, heart content to begin with "0x" or "0X" to be marked, such as "0x123abc" or "0X123abc"

**Modbus Mode:**  
Work mode could be set to master or slave mode with RTU/ASCII

**Modbus Master Setting:**  
In master mode, you could configure MAX eight server for slave

## 2.3 Server Setup

1. Connect the device and the router with the serial cable and log in to the router management page: 192.168.8.1
2. Click **Applications - DTU/MODBUS**, refer to the following diagram for configuration

**Applications**

**DTU Service**

**Connection Type**

**Basic Settings**

**Serial Setting**

**Help**

**Work Mode:**  
When the work mode is set to "Server", you should set the local port number at the same time. In other modes, when the local port is empty, then router will get it randomly.

**Data Center:**  
When the work mode is set to "Server", you do not need to configure the server ip.


**Login packets Settings:**  
When login package configuration for hexadecimal, login content to begin with "0x" or "0X" to be marked, such as "0x123abc" or "0X123abc"

**Heartbeat Settings:**  
When heartbeat package configuration for hexadecimal, heart content to begin with "0x" or "0X" to be marked, such as "0x123abc" or "0X123abc"

**Modbus Mode:**  
Work mode could be set to master or slave mode with RTU/ASCII

**Modbus Master Setting:**  
In master mode, you could configure MAX eight server for slave

**Save**   **Refresh**

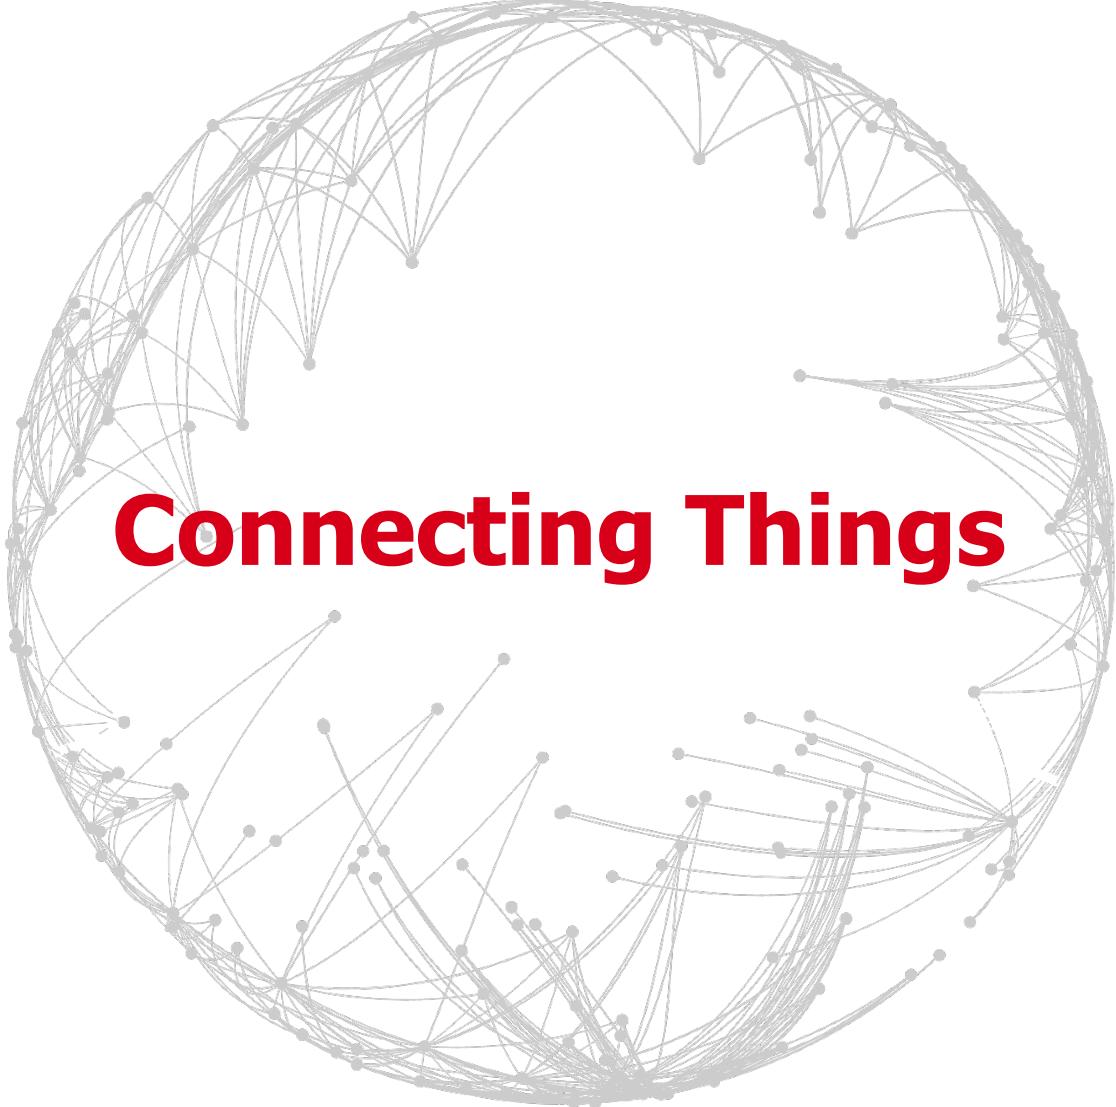

# Connecting Things

## Contact US

---

### Hongdian Corporation

**Add:** Tower A, Hongdian Building, 100 Huabao Road, Pinghu, Longgang District, Shenzhen, China

**Tel:** +86-755-88864288-2

**Fax:** +86-755-83404677

**E-mail:** Sales@hongdian.com