



Application Guide

Hongdian- Modem Bridge Mode



Contents

Contents.....	2
Revision History.....	2
1 Overview.....	3
2 Description.....	3
2.1 Configuration Steps	3

Revision History

Updates between document versions are cumulative. Therefore, the latest document version contains all updates made to previous versions.

Doc Version	Product	Release Data	Details
V1.0	Hongdian Router	2017.08.30	First Release
V1.0.1		2018.05.16	

1 Overview

This article introduces the configuration steps of bridge working mode of modem for Hongdian Router. After set up successfully, the router works as the bridge; and the PC(or other slave machine) that connects to LAN port of the router, will be assigned with the cellular network IP.

2 Description

2.1 Configuration Steps

1. Disable DHCP on router GUI>>Network>>DHCP server.
2. Make sure modem on GUI>>Network>>Modem is enabled, and LTE SIM card is inserted.
3. Make sure modem on GUI>>Network>>Modem>>Connection mode is bridge, and save the configuration, as show below.

The screenshot displays the 'Modem' configuration page in the router's GUI. The navigation tabs at the top include Network, Applications, VPN, Forward, Security, System, and Status. Under the 'Network' tab, there are sub-tabs for LAN, WAN, WLAN, WLAN_5G, Modem, Parameter Select, Network Type, and Link Backup. The 'Modem' sub-tab is active. In the 'Auto-Dialup' section, the 'Enable' button is highlighted. The 'Basic Settings' section contains the following fields:

- Interface Name: 0 (* Max length is 12)
- APN: (empty) Max length is 64
- Service Code: (empty) Max length is 64
- Username: card Max length is 64
- Password: (masked) Max length is 64
- PIN: (empty) Max length is 64
- Network Type: auto (dropdown)
- Simcard: SIM1 SIM2
- Connection mode: bridge (dropdown, circled in red)
- Advanced Settings: Display (button)

At the bottom of the page, there are 'Save' and 'Return' buttons.

4. Reboot device.
5. Set computer to get IP from router automatically through Lan port of router.
 - (1) Refresh the LAN connection of computer if computer doesn't get LTE IP address as expected.
 - (2) After computer get LTE IP address, verify if computer is be able to reach internet through LTE.
6. If computer reach internet properly, it means bridge works well.

PS:

When device working on Bridge mode, we will not able to access router GUI through Lan interface. Instead, we can

access router through WAN interface to check settings. The default IP of the WAN interface is 192.168.10.1/24. You will need to set IP of your computer manually to IP in this subnet 192.168.10.0/24



Create smart things



Contact us

 F14 - F16, Tower A, Building 14, No.12, Ganli 6th Road, Longgang District, Shenzhen 518112, China.

 +86-755-88864288-5

 +86-755-83404677

 hongdianchina

 www.hongdian.com

 sales@hongdian.com

 Hongdian_China